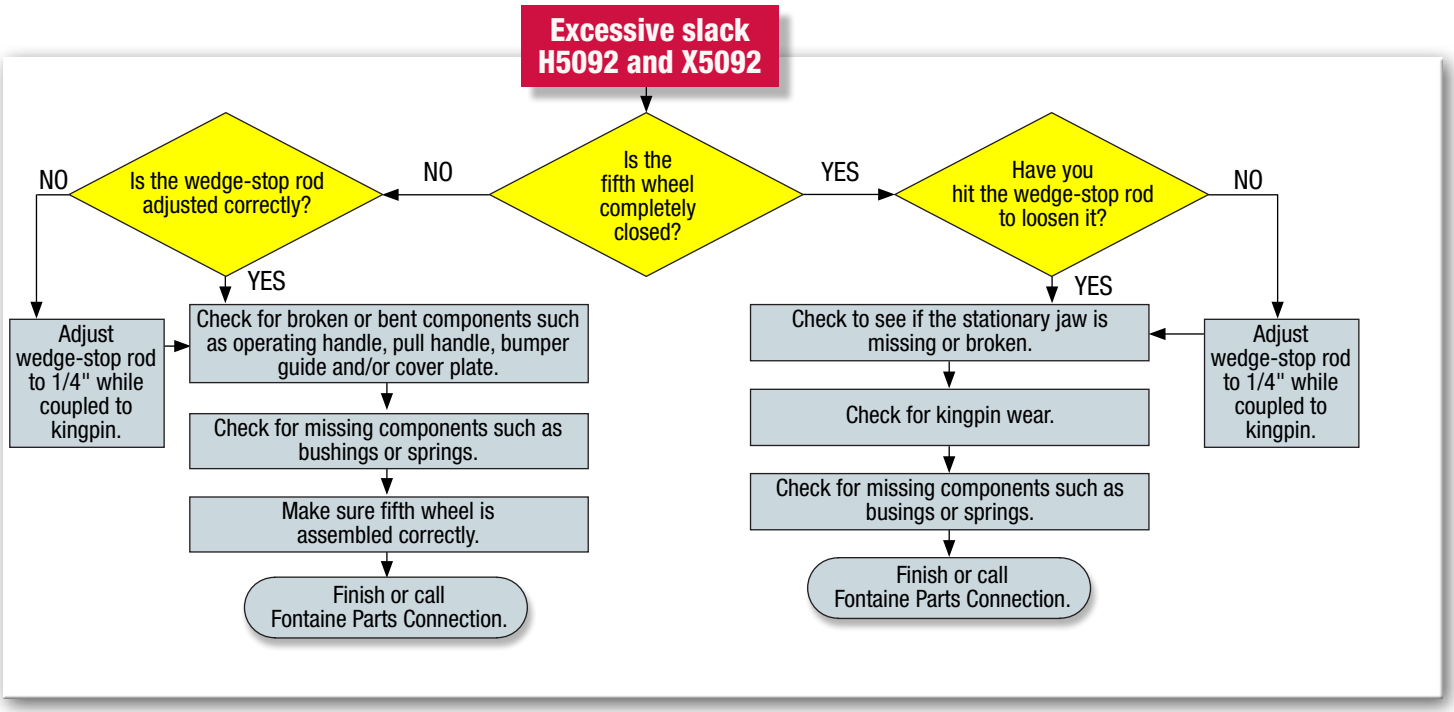
Excessive slack
H5092 and X5092
Is the fifth wheel completely closed?
NO
Is the wedge-stop rod adjusted correctly?
NO
Adjust wedge-stop rod to 1/4" while coupled to kingpin.
YES
Check for broken or bent components such as operating handle, pull handle, bumper guide and/or cover plate.
Check for missing components such as bushings or springs.
Make sure fifth wheel is assembled correctly.
Finish or call Fontaine Parts Connection.
YES
Have you hit the wedge-stop rod to loosen it?
NO
Adjust wedge-stop rod to 1/4" while coupled to kingpin.
YES
Check to see if the stationary jaw is missing or broken.
Check for kingpin wear.
Check for missing components such as busings or springs.
Finish or call Fontaine Parts Connection.